KMT P E

Grounding Kits

INSTALLATION INSTRUCTIONS
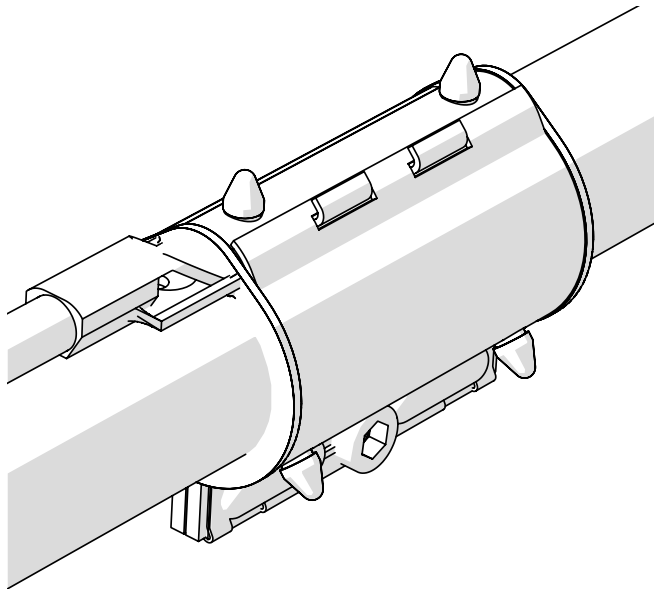
FIMO ®

⚠ WARNINGS!

1
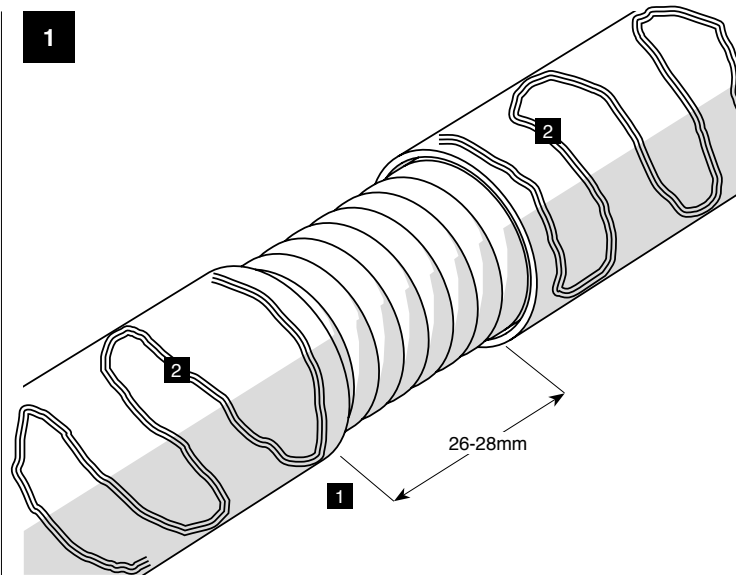
26-28mm

1. Strip off the cable sheath (26-28mm)
2. Lubricate with LUS, applying all around the cable

2
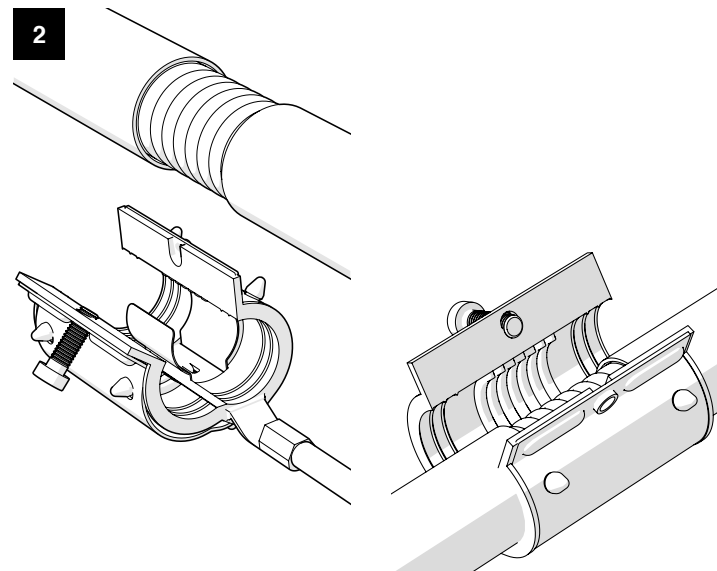
Insert **KMT** on cable

3
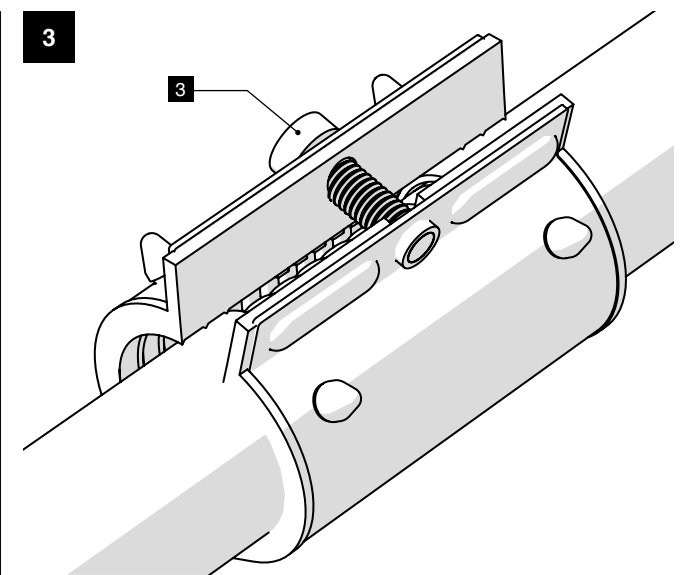
3. Tighten the screw (3÷4 Nm)

4

Done in a few seconds!